

Ford Focus MK3 Facelift



Carbon Blenden

Montageanleitung

Montage restliches Sortiment analog

Carbon Covers

mounting instructions




same steps apply to all covers



20°C - 25°C



Lieferumfang | scope of supply

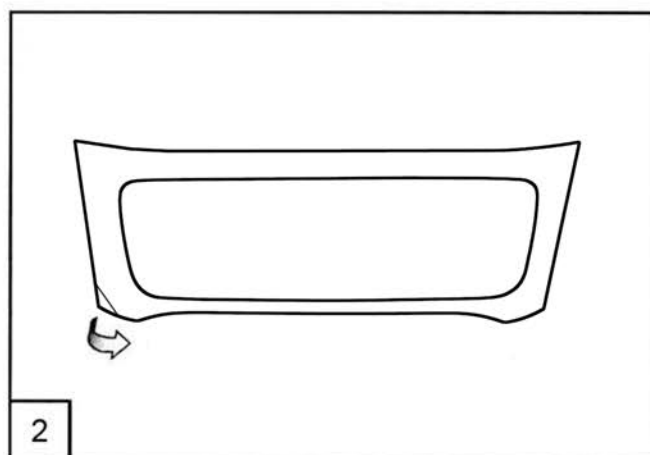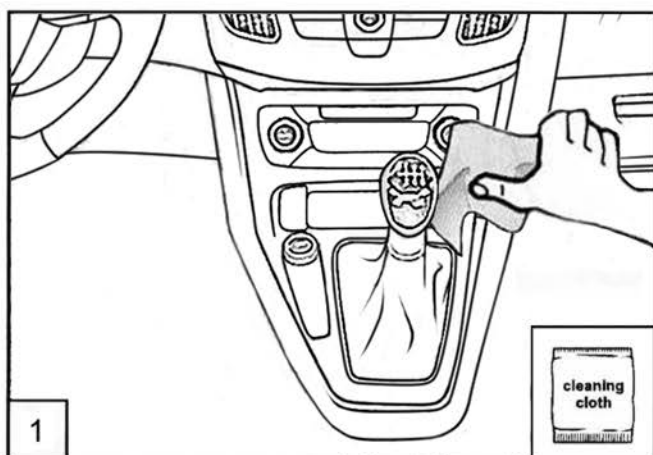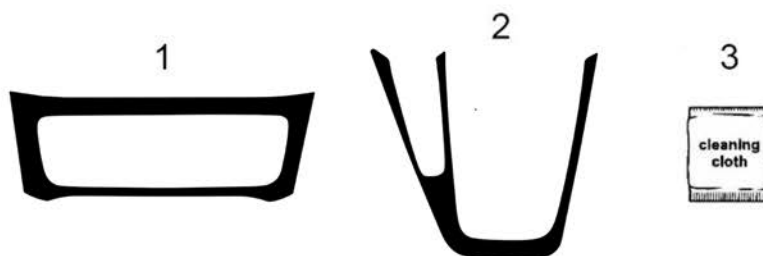

Die Blende wird unter das Armaturenbrett geklemmt.

Push the cover under the dashboard.

